


Dishwasher Quick Reference Guide - LAM8302

Please carefully read the User Instructions before operating the dishwasher.

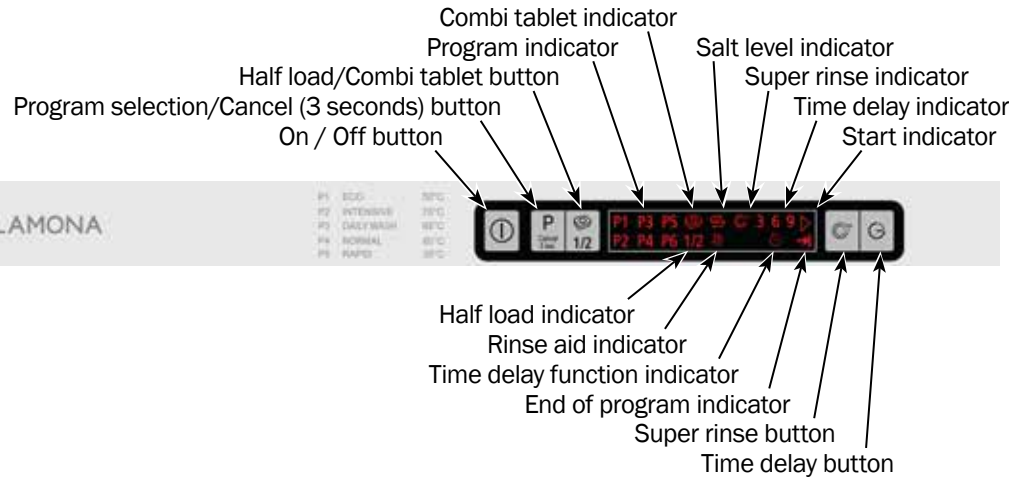

Programs and temperatures.	Cycle selection information.	Degree of Soiling	Detergents A=25cm ³ /15cm ³ B=5cm ³	Prewash	Wash	Dry	Time (mins)	Water (Litres)	Energy (Kwh)
P1 eco* 50°C	Most economic program for medium soiled dishes that are kept waiting.	Medium	A + B	+	+	+	210	13	0.83
P2 INTENSIVE 70°C	Heavily soiled dishes, pots and pans requiring hot pre-wash.	High	A + B	+	+	+	115	14.4	1.32
P3 DAILY WASH 65°C	Daily wash program for normally soiled dishes.	Medium	A + B	-	+	+	96	10.6	1.04
P4 NORMAL 60°C	Normally soiled dishes, fast cleaning in 58 minutes.	Low - Medium	A + B	-	+	+	58	10.6	1.10
P5 RAPID 35°C	Lightly soiled dishes that are scraped or pre-cleaned.	Low	A	-	+	-	30	10.2	0.77

Maximum plate size (cm)	
Upper basket	Lower basket
25	31

Caution:
Open door slowly as hot water and steam may escape if wash program running.

Power On/Off ①




Select program ②



Option (function key) - Select combi tablet



Option (function key) - Select 1/2 load

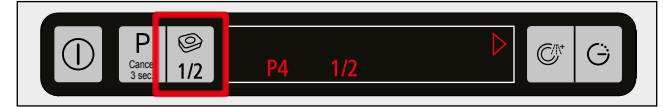

Option (function key) - Super rinse



Check salt and rinse aid



Option (function key) - Select time delay start 3/6/9hrs



Close the door program will start. ③

End of program indicator



To cancel a program. Press and hold for three seconds, close door. Machine pumps out and stops.



To cancel a function. Press and hold until the indicator light disappears, close door.

